Head / Blade Type	Part Number	Trimmer	Line Diameters Optional	FSA 45	FSA 57	FSE 60*	FSA 85*	FSA 90 R	FSA 130 R	FS 38 FS 40 C-E FS 45* / FS 46* FS 50 C-E	FS 56 C-E	FS 56 RC-E FS 70 R FS 94 R	FS 91 R FS 111 R FS 131 R	FS 111 RX	FS 91 FS 111 FS 131	FS 240	FS 240 R	FS 311	FS 360 C-EM FS 460 C-EM	FS 560 C-EM	FSB-KM with KM 56 RC-E KM 91 R KM 111 R**	FS-KM with KM 56 RC-E**	FS-KM with KM 91 R / KM 94 R KM 111 R / KM 131 R**	FS-KM with KMA 130 R / KMA 135 R	FSA 135 / FSA 135 R
LIGHT GRASS TRIMMER H	HEADS		1755 ST		=	=				==					15. to	ī.	-		= 9				# · ·		
AutoCut® 2-2	4008 710 2103	.080"			●7																				
AutoCut® C 3-2	4009 710 2106				●8																				
AutoCut® C 4-2	4006 710 2123	.080"					•																		
AutoCut® 5-2	4006 710 2103	.080"	<u>-</u>			•				•											•				
AutoCut® C 5-2 (DISC.)	4006 710 2106	.080"	1 :			•				•															
AutoCut® C 6-2	4006 710 2126	.080"	.095"			•				•											•				
AutoCut® 11-2	4004 710 2192	.095"	.080"																						
AutoCut® 25-2	4002 710 2191	.095"	.105"					•	•		•	•	•	•	•	•	•					•	•	•	•
AutoCut® C 25-2 (DISC.)	4002 710 2196	.095"									•	●1	•	•	•	•						•	•		
AutoCut® C 26-2	4006 710 2169	.095"	.105"									•	•	•2	•		•						•	•	•
AutoCut® 30-2 (DISC.)	4002 710 2187	.105"	.118"																				•		
AutoCut® 36-2	4002 710 2170	.105"	.118"/.130"										●3		●3								•		•
AutoCut® 40-2 (DISC.)	4003 710 2189	.105"	.118"															•	•						
AutoCut® 40-4 (DISC.)	4005 710 2102	.105"	.118"																	•					
AutoCut® 46-2	4003 710 2115	.105"	.118"/.130"															•	•						
AutoCut® 56-2	4005 710 2107	.105"	.118"/.130"																	•					
DuroCut 5-2	4006 710 2131	.080"	.065"/.095"							•											•				
DuroCut 20-2	4002 710 2182	.120"	.080"/.095"/.105"			•		•	•			•	•	•	•		•					•	•	•	•
DuroCut 40-4	4005 710 2114	.155"	.120/.130"					•										•	•	•					
FixCut™ 30-2 (DISC.)	40017102103	_	.080"/.095"/.105"					•				•	•		•	•4	•4					•	•		
FixCut [™] 31-2	40017102105	_	.080"/.095"/.105"					•					•		•	•4	•4						•	•	
STIHL SuperCut™ 20-2	40027102184	.095"	 :					•	•				•	•	•		•					•	•	•	•
STIHL SuperCut [™] 40-2	40037102142	.095"	===															•	•						

* Trimmers equipped with loop handles. For models that are/were available with optional handles, "R" denotes loop-handle version.

** 2018 models and newer. Approved for use with designated unit as originally equipped.

OApproved for use with loop handle (R) only if equipped with barrier bar deflector kit and a single or double shoulder harness.

Approved for use with bike handle, double harness and limit stop.

¹ Not for use on FS 94 R

² Not for use on FS 100 RX ³ Not for use on FS 80, FS 80 R, FS 90, FS 90 R, FS 110 or FS 110 R

⁴ Not for use on FS 240 or FS 240 R

⁵ When using Grass-4 and Grass-8 metal cutting blades with FS 56 C-E, trimmer must be equipped with deflector (4144 710 8119).

⁶ Not for use on FS 560 C-EM

⁷ Only fits FSA 57 trimmers starting with serial number 9XXXXXXXX.

⁸ Only fits FSA 57 trimmers starting with serial number 5XXXXXXXX.

Note: Numbers with "mm" show arbor size. Consult your instruction manual or your authorized STIHL Dealer for approved cutting head/deflector combinations.

Note: Barrier bar and large deflector must be attached when using a metal blade with loop-handle (R)


trimmer. Note: Specifications are as of Oct. 1, 2020. For most recent updates, visit STIHLusa.com. IMPORTANT INFORMATION

WARNING: Improper use of any brushcutter trimmer can cause serious or fatal injury. Read, understand and follow all safety instructions in your instruction manual. To reduce the risk of

injury from blade contact, circular saw blades may be used on FS brushcutters that have a bicycle handle and double shoulder harness and not on FS brushcutters with a "J" handle or loop handle (R). Other rigid blades may be used on FS brushcutters having a bicycle handle, a "J" handle, or a loop

handle equipped with a barrier bar. To reduce the risk of eye injury, always wear proper eye protection. Always use the appropriate deflector for the type of cutting attachment, as explained in your instruction manual.

TRIMMERS & BRUSHCUTTERS STIHLUSA.COM FSB-KM wi KM 56 RC-KM 91 R KM 111 R** Trimmer Line Diameters Head / Blade Type HEAVY GRASS MOWING HEADS & BLADES STIHL PolyCut™ 2-2 4008 710 2102 4006 710 2127 STIHL PolyCutTM 7-3 (DISC.) 4009 710 2104 NEW! STIHL PolyCut™ 3-2 4006 710 2134 NEW! STIHL PolyCut™ 6-2 4002 710 2189 STIHL PolyCut™ 20-3 (DISC.) 4003 710 2114 STIHL PolyCut™ 41-3 (DISC.) 4002 710 2198 NEW! TrimCut™ C 32-2 4003 710 2122 NEW! TrimCut™ C 42-2 4005 710 2117 NEW! TrimCut™ C 52-2 20 MM **GRASS-4** 4000 713 3801 0 25.4 MM **GRASS-4** 4001 713 3801 **GRASS-8** 4000 713 3802 0 **GRASS-8** 25.4 MM 40017133803 **BRUSH KNIVES** BRUSH KNIFE-250 MM 25.4 MM 4112 713 4100 BRUSH KNIFE-300 MM 20 MM 4119 713 4100 BRUSH KNIFE-350 MM 20 MM 4110 713 4100 FORESTRY SAW BLADES SCRATCHER-200 MM 20 MM 4000 713 4200 SCRATCHER-200 MM 25.4 MM 4112 713 4201 SCRATCHER-225 MM 20 MM 4000 713 4205 SCRATCHER-250 MM 20 MM 4104 713 4200 20 MM CHISEL-200 MM 4119 713 4200 25.4 MM CHISEL-200 MM 4112 713 4203 CHISEL-225 MM 4110 713 4204

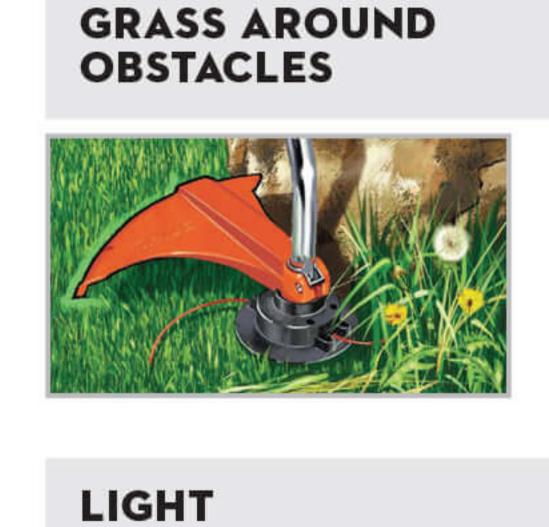

VEGETATION

DuroCut LINE HEAD

DuroCut

Ideal trimmer head if you require precut lengths operating in severe

LINE HEAD

Ideal trimmer head if you

prefer manual heads that

of nylon line, even when

require precut lengths

operating in severe

applications.

DuroCut

LINE HEAD



prefer manual heads that of nylon line, even when applications.

AutoCut® LINE HEAD

Double or quadruple line for

mowing and trimming. The

nylon line length is adjusted

by tapping the cutting head

against the ground.

Double line for mowing and Double or quadruple line for trimming. The nylon line mowing and trimming. The nylon line length is adjusted length is adjusted by hand. by tapping the cutting head

AutoCut® LINE HEAD

optimum cutting length.

LINE HEAD




Double line for mowing and trimming. The mowing line is automatically kept at the





STIHL PolyCut™ MOWING HEAD

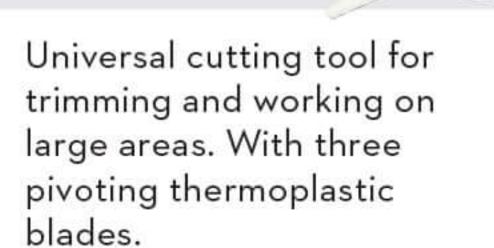

BUSHES & THIN TREES

REEDS & BUSHES BRUSH KNIFE



Steel triple blade.

For trimming and

scrub and thorny

removing tough,

tangled grass,

CIRCULAR SAW BLADE, CIRCULAR SAW BLADE, SCRATCHER TOOTH

trunks, sawing and clearing.

CIRCULAR SAW BLADE,

upwards. For gnarled

SCRATCHER TOOTH

Special steel tool for

bushes and thin

tree trunks.

mid-range brushcutters

CHISEL TOOTH Special steel tool for mid-range brushcutters upwards. For gnarled STIHL bushes, thin tree

SENSORE:

* Trimmers equipped with loop handles. For models that are/were available with optional handles, "R" denotes loop-handle version. ** 2018 models and newer.

 Approved for use with designated unit as originally equipped. OApproved for use with loop handle (R) only if equipped with barrier bar deflector kit and a

single or double shoulder harness.

Approved for use with bike handle, double harness and limit stop.

¹ Not for use on FS 94 R

as explained in your instruction manual.

² Not for use on FS 100 RX ³ Not for use on FS 80, FS 80 R, FS 90, FS 90 R, FS 110 or FS 110 R

⁴ Not for use on FS 240 or FS 240 R

⁵ When using Grass-4 and Grass-8 metal cutting blades with FS 56 C-E, trimmer must be equipped with deflector (4144 710 8119).

⁶ Not for use on FS 560 C-EM ⁷ Only fits FSA 57 trimmers starting with serial number 5XXXXXXXX. Not compatible with serial number 9XXXXXXXX

Note: Numbers with "mm" show arbor size. Consult your instruction manual or your authorized STIHL Dealer for approved cutting head/deflector combinations. Note: Barrier bar and large deflector must be attached when using a metal blade with loop-handle (R)

Note: Specifications are as of Oct. 1, 2020. For most recent updates, visit STIHLusa.com.

IMPORTANT INFORMATION WARNING: Improper use of any brushcutter trimmer can cause serious or fatal injury. Read, understand and follow all safety instructions in your instruction manual. To reduce the risk of


injury from blade contact, circular saw blades may be used on FS brushcutters that have a bicycle handle and double shoulder harness and not on FS brushcutters with a "J" handle or loop handle (R). Other rigid blades may be used on FS brushcutters having a bicycle handle, a "J" handle, or a loop handle equipped with a barrier bar. To reduce the risk of eye injury, always wear proper eye protection. Always use the appropriate deflector for the type of cutting attachment,



VEGETATION

HEAVY

prefer manual heads that require precut lengths of nylon line, even when operating in severe applications.

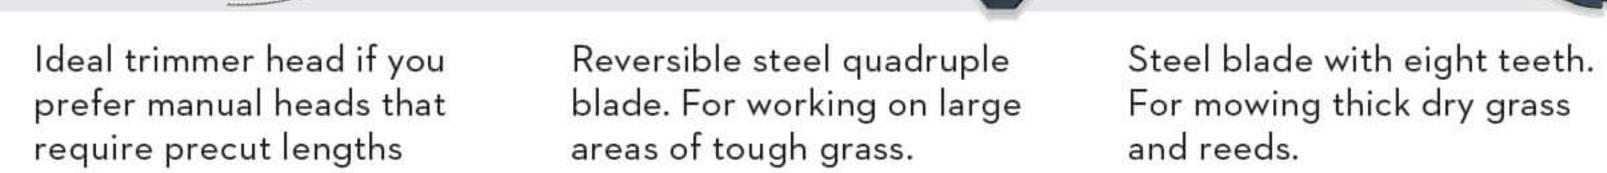

BLADE

blade. For working on large areas of tough grass.

GRASS CUTTING

For mowing thick dry grass and reeds.

against the ground.

LINE HEAD

STIHL SuperCut™

Double line for mowing and

trimming. The mowing line

is automatically kept at the

optimum cutting length.

GRASS CUTTING

BLADE